



Antron Lumena  
Only by DuPont




PRODUCT: Bouclé Grid™ in colorway Mulberry

## MOVE FREELY

Interface adheres to a “less is more” philosophy in terms of face weight. Products are engineered with a dense fiber construction, combined with our high performance backing system, allowing ease of movement and transition from patient rooms to corridors. This combination significantly lowers the resistance to rolling loads – from wheelchairs to hospital beds.

Roll with ease on Interface's modular flooring products. Using state-of-the-art testing to rate rolling resistance, Interface products receive excellent ratings on resistance to rolling traffic as compared to other floorcoverings and competitive products – as seen below. Lower resistance means easier movement across the surface.

## Average Rolling Resistance

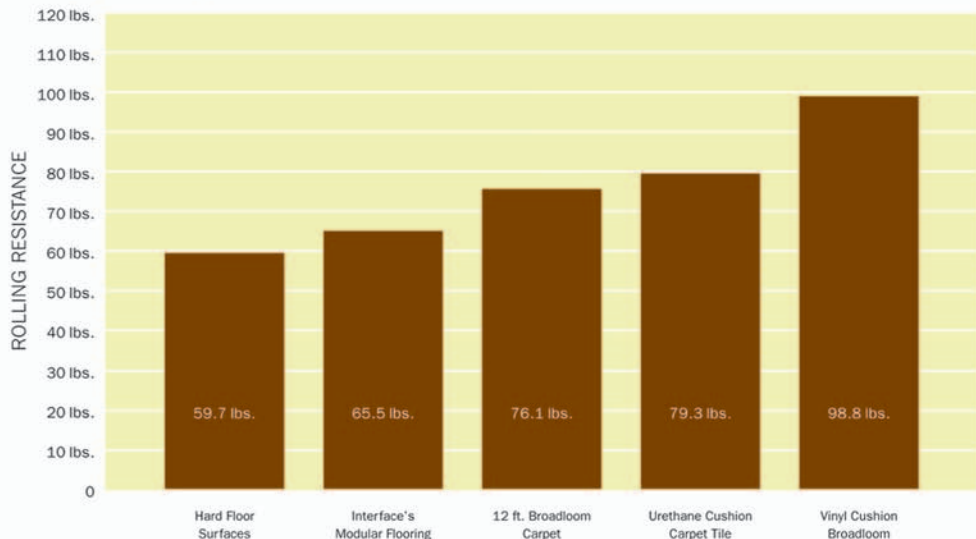

### AVERAGE RESULTS FROM FOUR TESTS:

- Effort required to push an occupied hospital bed after stopping for five minutes.
  - Effort required to push an occupied hospital bed around a corner.
  - Effort required to start an occupied hospital bed moving in a straight line.
  - Effort required to maintain an occupied hospital bed in constant motion.
- 
- Interface used the weight of an occupied bed for testing purposes - 900 lbs.
  - Hard Floor Surfaces include VCT, Linoleum, and Sheet Vinyl.

Interface's dense face construction, premium branded solution-dyed nylon, high performance structured backing and rigorous appearance retention testing provide flooring that can withstand continuous heavy foot and rolling traffic.